

Troubleshooting

EDU will not move

- EDU is not powered – check EDU power
 - Shade fabric is caught on something – Check that shade fabric is not caught on something or binding
 - EDU not assigned to keypad, IR transmitter, or CCI
-

EDU does not fully open or fully close

- Presets have been set incorrectly – try using raise and lower buttons
 - Limits have been set incorrectly – refer to "Setting Limits"
 - Shade fabric is caught on something – free shade
-

Shade moves up when pressing lower button, and down when pressing raise button

- Open and close limits have been reversed – refer to "setting limits"
-

Fabric not level

- Adjust using level adjustment screw
 - Check that brackets are mounted level
 - Check that fabric is tracking correctly on the shade tube
-

Fabric not centered over window

- Center shade using center adjustment
 - Check that brackets are centered
 - Check that fabric is tracking correctly on the tube
-

Shade does not move smoothly

- Check for binding of shade fabric on side channels, fascia, etc
 - Check fabric tracking
-

Keypad LEDs are off, keypad will not control any shade

- Check that keypad is powered

Keypad LEDs are lit, but keypad will not operate any shade

- All presets have been set to same height – try using raise/lower buttons at keypad
 - Communications Link not wired to EDU – check wiring
 - EDU has been un-assigned from keypad – refer to assignment section
-

Keypads will not operate shade, IR works properly

- Check that keypad is powered
 - Keypad not wired correctly – check wiring
 - EDU has been un-assigned from keypad. Refer to assignment section
 - Presets are all programmed to same location, try using raise/lower at keypad
-

Cannot store presets

- Preset lock enabled
 - Presets are being accidentally re-programmed – set presets, enable preset lock
-

Keypad does not operate all the shades it is assigned to

- EDU has been unassigned from keypad – refer to assignment section
 - EDU has all presets set to same height, try raise/lower
 - EDU is not wired correctly
 - Keypad is not wired correctly
-

IR controls will not operate shade, keypads work properly

- IR transmitter does not have line of site to IR receiver
 - Out of range – move to within 30 feet of IR receiver
 - EDU has been unassigned to IR receiver – refer to assignment section
 - IR receiver not properly installed on EDU
-

Shades in a room move on their own

- EDUs are assigned to control in another room – refer to assignment section
-