

Programming

Assigning EDUs to a CCI

Assignment Overview

By default, after the system has been addressed, no EDUs are assigned to keypads, CCIs or IR Receivers.

Assignment determines which EDU will be operated by each keypad, IR transmitter, and CCI. Assigning EDUs to keypads, CCIs or IR Receivers is necessary when operation of an individual, or a user-defined group of EDUs, or all EDUs is desired.

Assigning EDUs to a single keypad, CCI or IR Receiver does not affect which EDUs are operated by other keypads, CCIs or IR Receivers in the system.


Notes:

- Entering “Assignment Mode” causes every EDU in the system to move between it’s Open and Close limits. Make certain that limits have been set appropriately for each EDU in the system before entering “Assignment Mode.”
- The CCI can be configured to accommodate multiple groups of shades (see page 2.53). Configurations other than the default have Open and Close inputs in locations other than inputs 1 and 5.

Assigning EDUs to a CCI when EDUs are not accessible

STEP 1


Begin by entering “Program Mode” on the CCI by setting switch 6 to OFF.

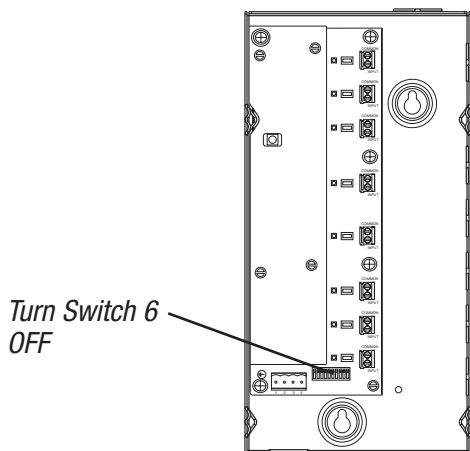

STEP 2

Enter “Assignment Mode” by pressing and holding the Open and Close buttons on the CCI simultaneously for 5 seconds. The LEDs next to the Open and Close buttons will flash, indicating the CCI is ready to initiate “Assignment Mode.”


Press the Open and Close buttons for 5 seconds

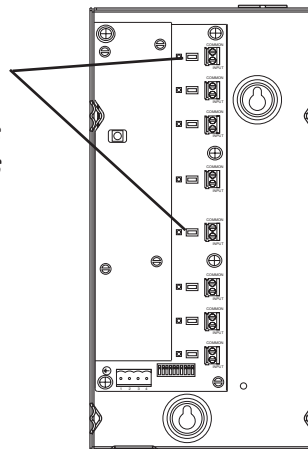

STEP 3

Initiate assigning EDUs by pressing the Close button. The LED next to the Close button will flash slowly (1 time a second), the LED next to the Open button will turn OFF. EDUs that are assigned to the CCI in “Assignment Mode” will move to their Close Limit. EDUs that are not assigned to the CCI in “Assignment Mode” will move to their Open Limit.

Press the Close button

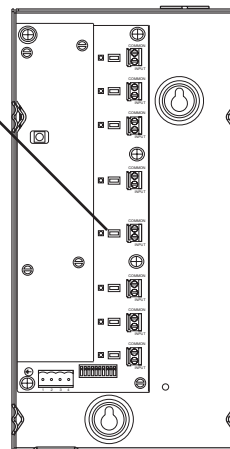

Programming


Assigning EDUs to a CCI

STEP 4

Assign or un-assign EDUs as desired. By default no EDUs are assigned to CCIs.

In order to **assign** all EDUs in the system, press and hold the Close button for 5 seconds.


In order to **un-assign** all EDUs in the system, press and hold the Open button for 5 seconds.

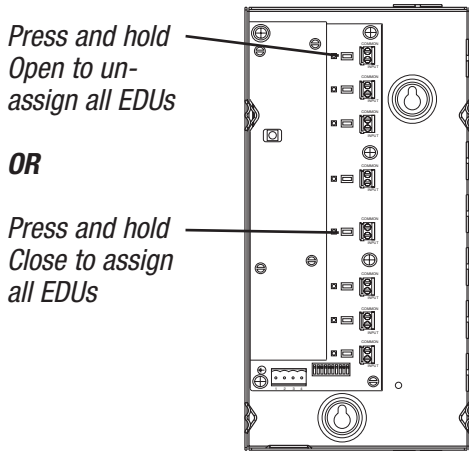

STEP 5

Using the CCI to select an EDU.

Select the EDU to adjust by pressing and releasing the Open button on the CCI. Each time the Open button is pressed and released, an EDU will fast cycle. Continue pressing Open until the desired EDU is selected and fast cycling. The Close button can also be used to select an EDU, moving through EDUs in the opposite order.

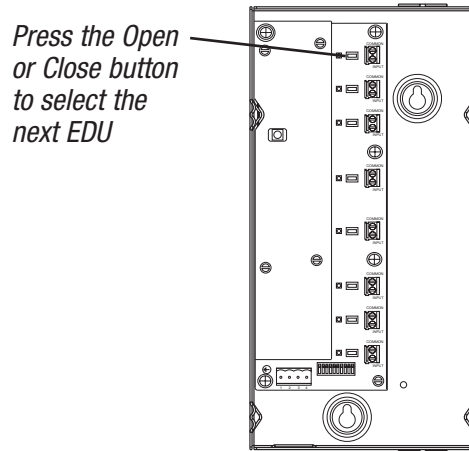

Programming

Assigning EDUs to a CCI

STEP 6

Assign or un-assign the currently selected EDU using the Raise and Lower buttons.


To **assign** an EDU, press the Lower button.

To **un-assign** an EDU, press the Raise button

*Press Raise
to un-assign
the EDU*

OR


*Press Lower
to assign the
EDU*

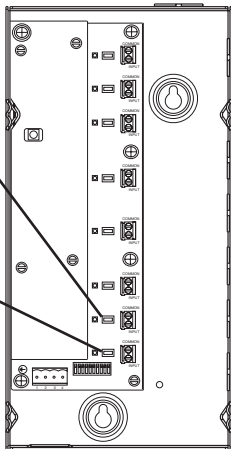

STEP 8

Return the CCI to normal mode by setting switch 6 back to ON.

*Turn Switch 6
ON*

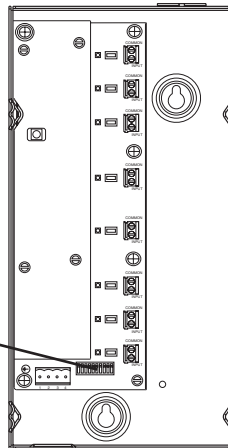

STEP 7

Exit "Assignment Mode" by pressing and holding the Open and Close buttons simultaneously for 5 seconds. Each EDU will return to the level it was at when "Assignment Mode" was entered.

*Press and
hold the Open
and Close
buttons for 5
seconds*

